


Serial PROFIBUS Interface



Version: EN-062016-2.3

© Copyright 2016 Softing Industrial Automation GmbH

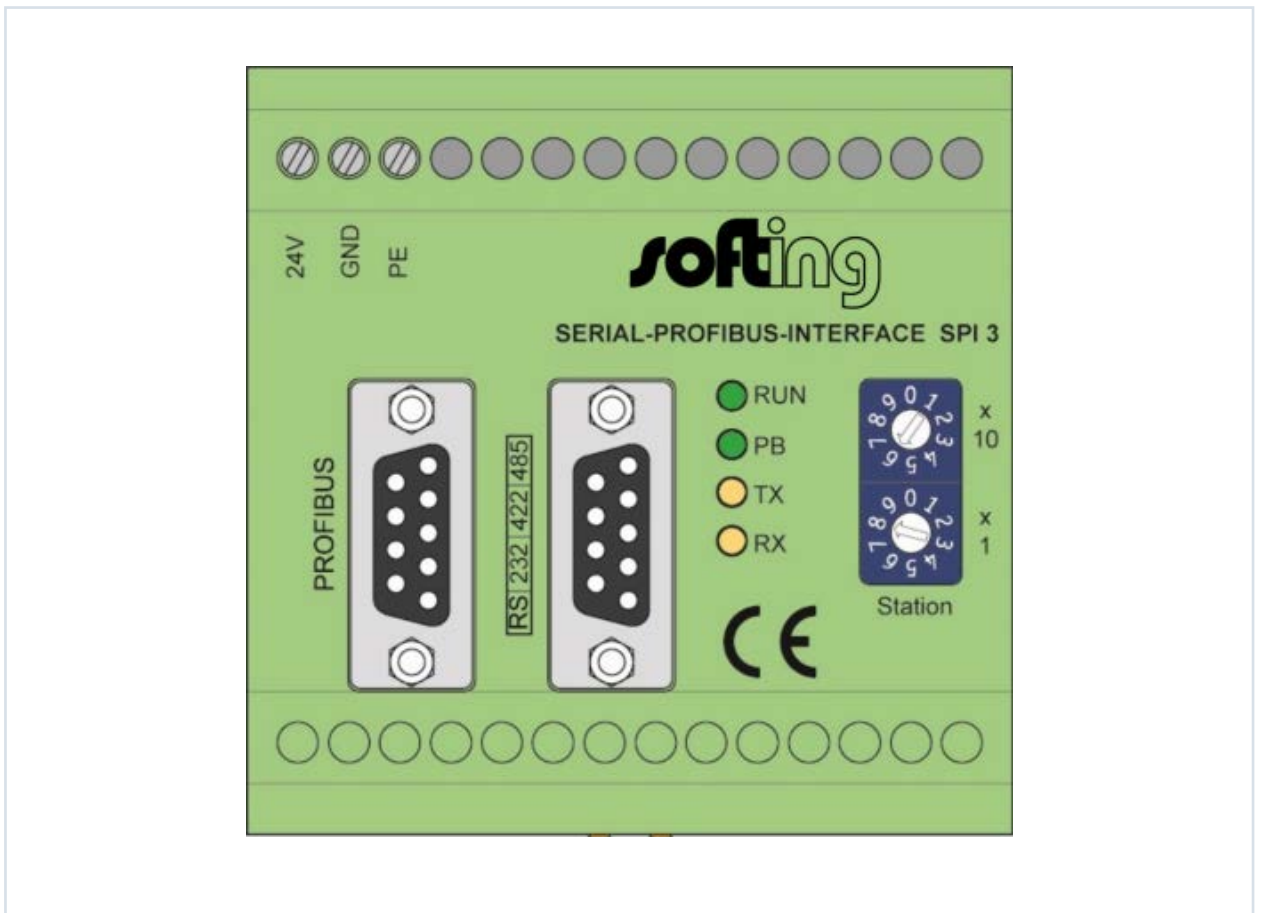

Disclaimer of liability

The information contained in these instructions corresponds to the technical status at the time of printing of it and is passed on with the best of our knowledge. The information in these instructions is in no event a basis for warranty claims or contractual agreements concerning the described products, and may especially not be deemed as warranty concerning the quality and durability pursuant to Sec. We reserve the right to make any alterations or improvements to these instructions without prior notice. The actual design of products may deviate from the information contained in the instructions if technical alterations and product improvements so require.

It may not, in part or in its entirety, be reproduced, copied, or transferred into electronic media.

Softing Industrial Automation GmbH

Richard-Reitzner-Allee 6
85540 Haar / Germany
<http://industrial.softing.com>



+ 49 89 4 56 56-0



+ 49 89 4 56 56-488



info.automation@softing.com

The latest version of this manual is available in the Softing download area at: <http://industrial.softing.com>.

Table of Contents

1	Introduction	4
1.1	About this document	4
1.2	Symbols used	4
1.3	Intended use	4
1.4	Safety precautions	5
2	Product overview	6
3	Connecting up the SPI 3	7
3.1	Mounting the SPI	7
3.2	Setting the PROFIBUS address	7
3.3	Connecting up the power supply	7
3.4	Connecting up to the PROFIBUS	8
3.5	Connecting up to the serial Fieldbus device	8
4	Technical data	9

1 Introduction

1.1 About this document



Read this manual before starting

For damages due to improper connection, implementation or operation Softing refuses any liability according to our existing warranty obligations.

1.2 Symbols used



Note

This symbol is used to call attention to notable information that should be followed during installation, use, or servicing of this device.



Hint

This symbol is used when providing you with helpful user hints.



CAUTION

CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.



WARNING

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury

1.3 Intended use

The SPI 3 is designed as an interface between Fieldbus devices and the PROFIBUS. Do not use the SPI 3 for any other purpose.

2 Safety precautions



CAUTION

The SPI 3 may only be installed by qualified technical personnel with appropriate electro-technical qualifications. Observe the regulations for handling electrical equipment to VDE 0100.



The faultless and safe operation of the product requires proper transport, proper storage and installation, and expert operation and maintenance in accordance with the manual. The permissible ambient conditions given in the Technical Data must be complied with.



Note

Large temperature differences between the storage and the installation site can result in condensation within the SPI 3. In such cases, to prevent damage to the device you should wait at least 3 - 4 hours after installing the SPI 3 before switching on the power.

3 Product overview

The SPI 3 is used to connect a serial Fieldbus device to the PROFIBUS system. The SPI 3 has the following interfaces and operating/display elements:

Connections and interfaces

- Power supply
- 24 V Terminal for external 24 V power supply
- GND Signal ground terminal
- PE Protective ground terminal
- PROFIBUS interface
- Serial interface

Operating elements


Rotary switches for setting the PROFIBUS address

- Switch for setting the tens value
- Switch for setting the units value

Display elements

- | | |
|-------|--|
| LEDs: | to display operating states |
| RUN: | lit continuously if supply voltage is present, flashes in case of errors |
| PB: | lights up if the SPI 3 has been configured by the master and is operational, flashes in case of errors |
| TX: | flashes if data is being sent to the serial interface |
| RX: | flashes if data is being received from the serial interface |

4 Connecting up the SPI 3

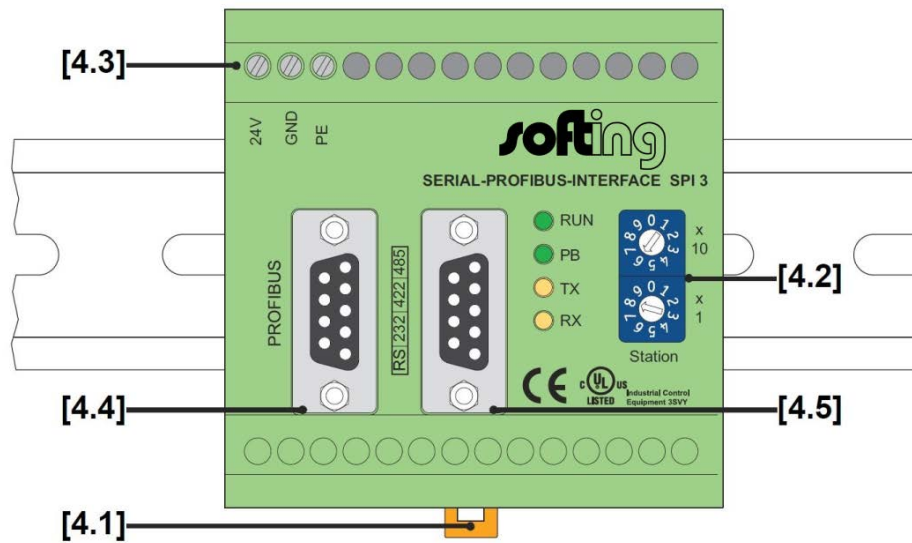

4.1 Mounting the SPI

Place the notch of the SPI 3 on the top hat rail and move the SPI 3 downward until the stop lever locks on the top hat rail.



Note

Above and below the SPI 3, a minimum of 5 cm head space for heat dissipation needs to be available.

4.2 Setting the PROFIBUS address

The PROFIBUS address is set with rotary switches.

Example: In order to set the PROFIBUS address 68, turn the rotary switch for the 10s to 6, and the rotary switch for the ones to 8.



Note

The SPI 3 only updates its PROFIBUS address during a restart. Set the PROFIBUS address on the SPI 3 before switching on the power, or turn off the power briefly after changing the PROFIBUS address.

Configure only numbers between 01 and 99.

4.3 Connecting the power supply

Connect the cables for 24 V power supply, ground and protective ground to the corresponding screw terminals 24 V, GND and PE.



WARNING

Incorrect grounding of the SPI 3 can injure personnel and damage equipment. Make sure the SPI 3 is correctly grounded.



Note

Although the SPI 3 is protected against polarity reversal, connecting up the power supply with in- correct polarity for extended periods can damage the device. Make sure that the power supply is connected with correct polarity.

4.4 Connecting up to the PROFIBUS

Ensure that the PROFIBUS connector uses the pin assignments shown below.

Attach the PROFIBUS connector to the PROFIBUS interface socket on the SPI 3 and secure the connector with the retaining screws.



Note

Only use commercially available PROFIBUS connectors for connecting to the bus. If the SPI 3 is installed at the beginning or end of the PROFIBUS cable segment, use PROFIBUS connectors that contain an integrated terminating resistor. To ensure that the SPI 3 functions without errors, you must ground the shield of the PROFIBUS cable.

4.5 Connecting up to the serial Fieldbus device

Ensure that the sub-D connector for the serial interface uses the pin assignments shown below (connect the cable shield to the case of the sub-D connector).

Attach the sub-D connector for the serial interface to the serial interface socket on the SPI 3 and secure the connector with the retaining screws.



Note

Use a shielded cable for connecting to the serial Fieldbus device and ground the shield to ensure that the SPI 3 functions without errors.

5 Technical data

Electrical data

Nominal supply voltage(limit values)	V DC	24 (19.2...28.8)
Current consumption max.	mA	200
Protection class	IP	20
Galvanic isolation	V DC	500

Operating conditions

Ambient temperature range	°C	0...+60
---------------------------	----	---------


Case data

Dimensions W × H × D	mm	75 × 75 × 53
Weight (approx.)	g	136

PROFIBUS interface

Interface	Type	RS 485
Transmission rate	Bit/s	9,600...12M

Sub-D plug pin assignment

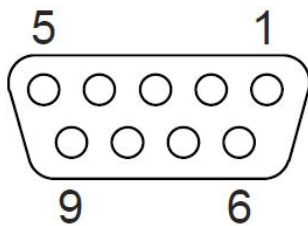


Pin 1	Shield
Pin 2	not assigned
Pin 3	B line data
Pin 4	RTS
Pin 5	GND 5V DC (M5)
Pin 6	Potential 5 V DC (P5)
Pin 7	not assigned
Pin 8	A line data
Pin 9	not assigned

Serial interface

Interface	Type	RS 232 ¹ , RS 422 ¹ , RS 485 ¹
Fieldbus device data transfer rates	Bit/s	110; 300; 600; 1,200; 2,400; 4,800; 9,600; 19,200; 28,800 ² ; 38,400 ² ; 57,600 ²

Sub-D plug pin assignment for serial interface


RS 232

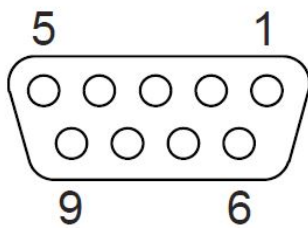

Pin 1	unused
Pin 2	TXD (out)
Pin 3	RXD (in)
Pin 4	unused
Pin 5	GND
Pin 6	+ 5 V
Pin 7	CTS
Pin 8	RTS (out)
Pin 9	unused

Sub-D plug pin assignment for serial interface


RS 422

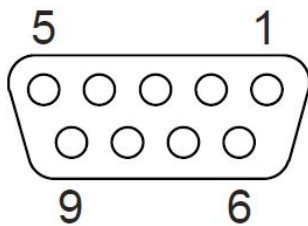

Pin 1	unused
Pin 2	unused
Pin 3	REC-P
Pin 4	TRANS-P
Pin 5	GND
Pin 6	+ 5 V
Pin 7	unused
Pin 8	REC-N
Pin 9	TRANS-N

¹ see label on SPI 3

² depends on protocol

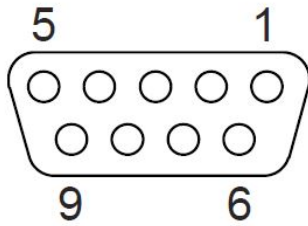Sub-D plug pin assignment for serial interface

RS 485

Pin 1	unused
Pin 2	unused
Pin 3	BUS-P
Pin 4	unused
Pin 5	GND
Pin 6	+ 5 V
Pin 7	unused
Pin 8	BUS-N
Pin 9	unused

Other

 Certificates

CE, UL

Softing Industrial Automation GmbH

Richard-Reitzner-Allee 6

85540 Haar / Germany

<http://industrial.softing.com>



+ 49 89 4 56 56-0



+ 49 89 4 56 56-488



info.automation@softing.com